


4 D-CELL BATTERY PACK INSTALLATION INSTRUCTIONS

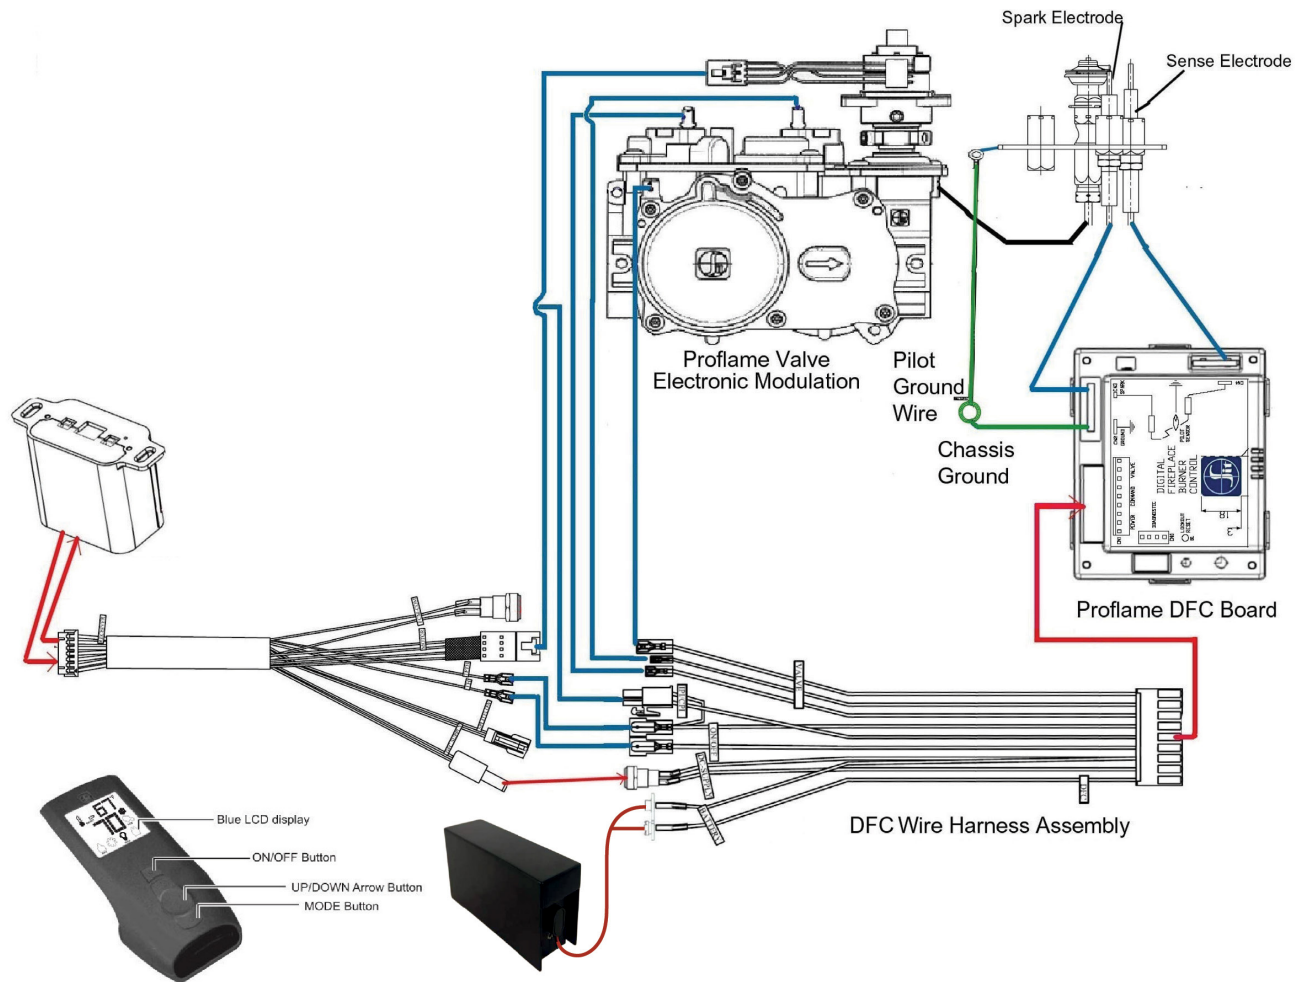

SIT Profleme 1 (VEN/VEP) Control System Wiring Diagram

⚠ WARNING Failure to position the parts in accordance with these diagrams or failure to use only parts specifically approved with this appliance may result in property damage or personal injury.

1. Remove all logs, ember material, and media from the burner assembly and place them on a safe surface.
Note: Handle the logs carefully to avoid damage.
2. Turn OFF the gas supply to the appliance and disconnect the gas line from the burner assembly.
3. Remove the burner assembly from the fireplace and place it on a flat and stable work surface.
4. Position the burner with the back side facing toward you and locate the wiring harness area of the unit.
5. Locate the 6V D-cell battery connector wiring harness and gently pull enough wiring length out from the burner assembly for connection. (See Control System Wiring Diagram for reference).



6. Unpack the D-cell battery kit and remove the heat shield from the battery pack assembly.




7. Connect the D-cell battery pack connector securely to the burner wiring harness connector (see wiring diagram and picture below).



8. Reinstall the heat shield onto the battery pack assembly, ensuring the connector side faces the open side of the heat shield. **Note:** Replace all AA and AAA batteries in the system during installation.



9. Place the burner assembly back into the fireplace and position the D-cell battery pack on the right side of the burner inside the fireplace.

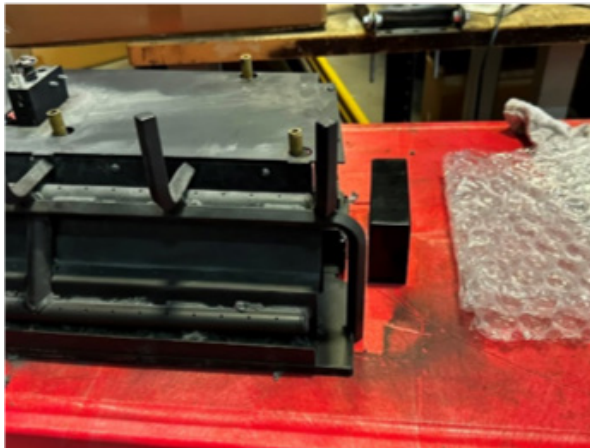

10. Test the system to confirm proper ignition and operation. If the system does not ignite, verify all battery installations and wiring connections are correct. Re-pair the receiver and remote if necessary.
11. Reconnect the gas line and carefully reinstall all logs, ember material, and media onto the burner assembly.
12. Turn ON the gas supply, check all gas connections for leaks, and verify proper burner operation.